WINDOW COVERINGS

Measurement Guide

Inside Mount

- Blinds are mounted inside the window casing. Use a metal measuring tape (cloth tapes may stretch).
- Measure the width in 3 different places and record the narrowest width.
- Order based on blind width to the nearest 1/8". Do not order blinds wider than the inside width.
- Measure the length from the top of the window opening to the top of the windowsill.
- Select the length closest to your window's length. Do not order blinds shorter than your window opening.

INSIDE WIDTH INSIDE WIDTH

Outside Mount

- Blinds are are mounted inside the window casing. Use a metal measuring tape (cloth tapes may stretch).
- Measure the exact width and length of the entire area to be covered. For added light control and privacy, we recommend adding approximately 1.5" on each side and approximately 3" for overall length.
- Order based on blind width to the nearest 1/8". Do not order blinds wider than the outside width.
- Select the length closest to your window's length. Do not order blinds shorter than the area to be covered.



WE'RE HERE TO HELP

Get Help with Measuring

Our measuring resources can help you get the best fit for your products. Watch our measuring video series by visiting **hdsupplysolutions.com** and searching **measuring videos** or, if you have an assigned field sales representative, ask about our free measuring service. Call 1.800.431.3000 for details.

