

IMPORTANT INFORMATION**Care and Cleaning**

- For normal spills, a damp cloth is sufficient. Remember to dry the surface immediately.
- White Thermofoil doors can be cleaned with most general purpose household cleaners.
- Wood doors can be cleaned with most general purpose household cleaners and polished with most furniture care products, not containing wax, petroleum solvents or silicones.
- Do not use caustic agents and/or abrasive scrubbers, or oven cleaners.
- Nicks and dings can be repaired with touch up kits, available by calling AWC customer service department at (888) 578-4009.
- For stains that persist, flakes of ivory soap diluted in warm water may be used. Remember to dry the surface immediately.
- Cabinets can be cleaned with a damp sponge or cloth using soapy water, or most general purpose household cleaners. Do not use any abrasive cleaner or scrubbers.
- Do not let liquid stay on the surface for a long period of time. The service is water resistant, not waterproof.

Repairing Door or Drawer Edge Scrapes

Use touch/up sticks available by calling AWC customer service department at (888) 578-4009 to fill in a scratch or nick. Remove excess residue leaving a smooth surface.