


# Use and Care Guide

## Louvered Exhaust Hood

Item # 592-164  
Model # BLH6WHD

**EVERBILT**

### TOOLS REQUIRED



Caulking gun




Phillips screwdriver

### HARDWARE REQUIRED (NOT INCLUDED)



Screws (4)




Latex caulking

## Installation


### 1 ASSEMBLING THE ALUMINUM PIPE

- Press the sides of the aluminum pipe together and lock them into place.

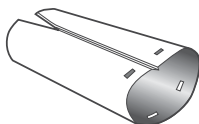

### 2 ATTACHING THE VENT CAP TO THE PIPE


- Attach the vent cap to the pipe. Ensure the pipe fits snug inside the collar. Align the clips on the collar (A) so they snap into the pipe slots (B).

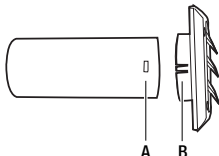

### 3 CUTTING A HOLE THROUGH THE WALL


- Cut a hole through the wall  $\frac{1}{4}$  in. diameter larger than the pipe. For example, to accommodate a 4 in. pipe cut a hole  $4\frac{1}{4}$  in. in diameter.

**NOTICE:** Ensure the appropriate tool is used to cut the hole in the wall according to the type of wall material.

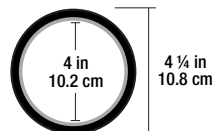


### 4 INSTALLING THE EXHAUST HOOD

- From the outside, pass the pipe through the hole opening until the vent cap lies flush against the outside wall surface.

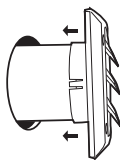

### 5 SECURING THE VENT CAP

- Secure the vent cap to the wall by screwing it into place and/or caulking around the reveal.

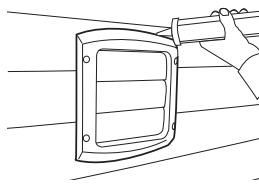

## Safety Information



**IMPORTANT:** Vent the exhaust hood outdoors through a wall or window opening as close as possible to the dryer.

## Warranty


### WHAT IS COVERED

All merchandise is warranted to be free from defects in workmanship and material for one year from the date of purchase. This includes normal wear and performance failure on items. The manufacturer will replace or repair at their option.

### WHAT IS NOT COVERED

This warranty only covers normal wear and performance failure. It does not cover any malfunction, performance failure, or defect arising from the misuse, abuse, neglect, or modification of the product. Any damage or malfunction inflicted upon the product by the user or other external sources, or any failure to comply with the warnings and instructions, is not covered.

For further assistance visit [www.HomeDepot.com](http://www.HomeDepot.com).

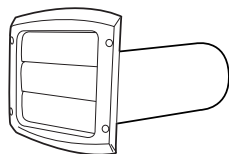


# Guía de uso y cuidado

## Cubierta de escape apersianada

Artículo # 592-164  
Modelo # BLH6WHD

**EVERBILT**

### HERRAMIENTAS NECESARIAS



Pistola para calafateado




Destornillador Phillips

### MATERIAL Y HERRAJES NECESARIOS (NO SE INCLUYEN)



Tornillos (4)




Compuesto de látex para calafatear

## Installation


### 1 CÓMO ARMAR EL TUBO DE ALUMINIO

- Presione el tubo de aluminio para unirlo y fijarlo por los laterales.

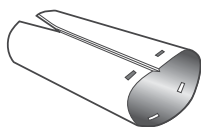

### 2 CÓMO ACOPLAR LA TAPA DEL RESPIRADERO AL TUBO


- Coloque la tapa del respiradero al tubo. Asegúrese de que el tubo quede perfectamente ajustado dentro del collar de empalme. Alinee las presillas del collar de empalme (A) de manera que traben en las ranuras del tubo (B).

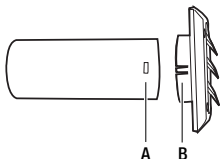

### 3 CÓMO HACER UN ORIFICIO EN LA PARED


- Abra un orificio en la pared que tenga ¼ pulg. de diámetro más que el tubo. Por ejemplo, para un tubo de 4 pulg., abra un orificio de 4 ¼ pulg. de diámetro.

**AVISO:** Asegúrese de usar la herramienta adecuada para abrir el orificio en la pared de acuerdo con el tipo de material de la pared.

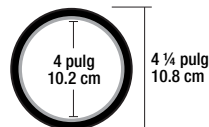


### 4 CÓMO INSTALAR EL SOMBRERETE DEL ESCAPE

- Desde el exterior, pase el tubo a través del orificio hasta que la tapa del respiradero esté a ras con la superficie exterior de la pared.

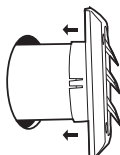

### 5 CÓMO ASEGURAR LA TAPA DEL RESPIRADERO

- Fije la tapa del respiradero a la pared atornillándola en su lugar y/o aplicando calafateado alrededor del borde.

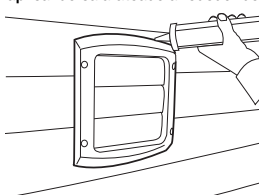

## Información de seguridad



**IMPORTANTE:** Ventile el sombrero de escape hacia el exterior a través de una pared o de una ventana lo más cerca posible de la secadora.

## Garantía

### ¿QUÉ SE CUBRE?

Toda la mercancía se garantiza contra defectos de fabricación y de los materiales durante un año a partir de la fecha de compra. Esto incluye el desgaste y las fallas en el desempeño normales de los artículos. El fabricante reemplazará o reparará el artículo a su criterio.

### ¿QUÉ NO SE CUBRE?

Esta garantía cubre únicamente el desgaste y las fallas en el desempeño normales. No cubre el mal funcionamiento, las fallas en el desempeño ni los defectos que surjan debido al mal uso, el abuso, la negligencia o la modificación del producto. No están cubiertos los daños ni el mal funcionamiento que se cause al producto por parte del usuario o otras fuentes externas, ni las fallas debidas al incumplimiento de las advertencias y las instrucciones.

Para obtener más ayuda visite [www.HomeDepot.com](http://www.HomeDepot.com).