



Brighton MANOR™

ASSEMBLY INSTRUCTIONS Single Door Bathroom Vanity-White

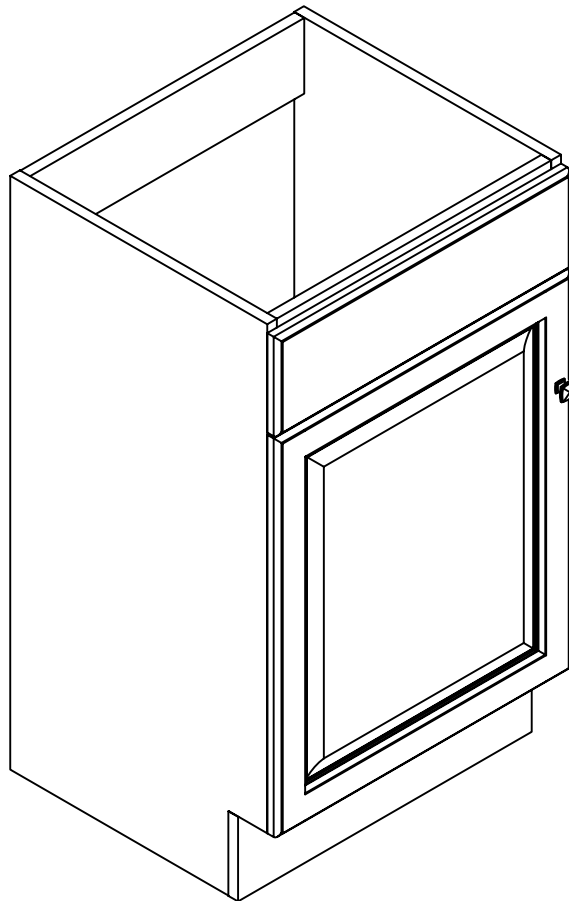


Distributed by:
HD Supply Facilities Maintenance, Ltd.
10641 Scripps Summit Court
San Diego, CA 92131
1-800-431-3000
www.hdsupplysolutions.com
MADE IN CHINA


PARTS LIST:

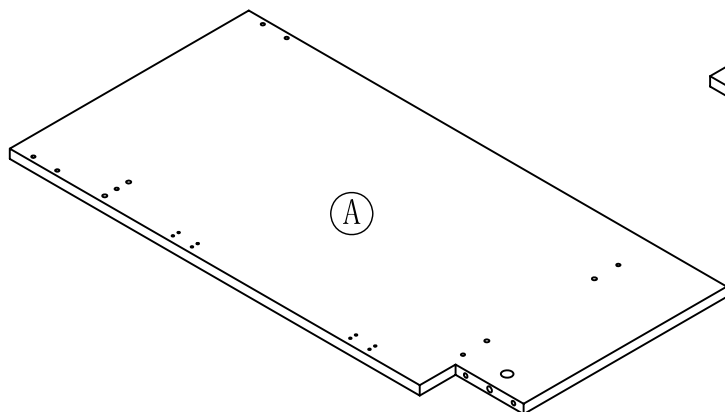


LEFT SIDE PANEL 1PC

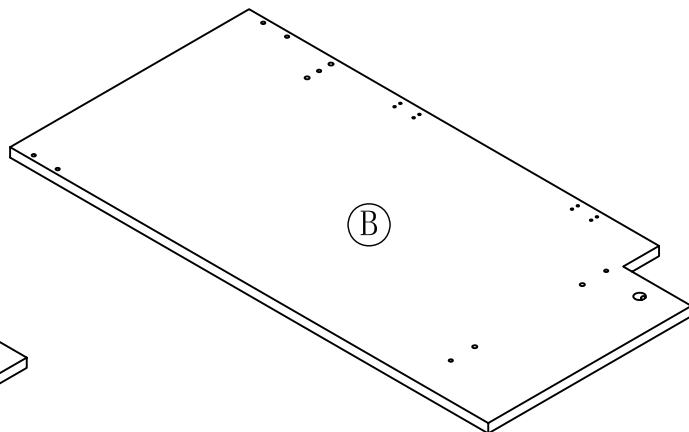


RIGHT SIDE PANEL 1PC

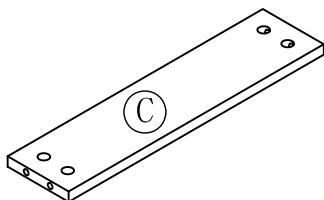


BACK CROSS BRACE 1PC

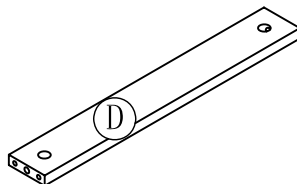


FRONT CROSS BRACE 1PC

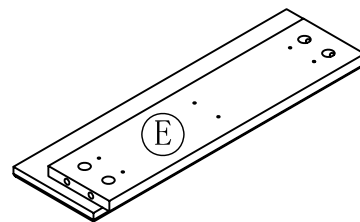


FALSE DRAWER FRONT 1PC

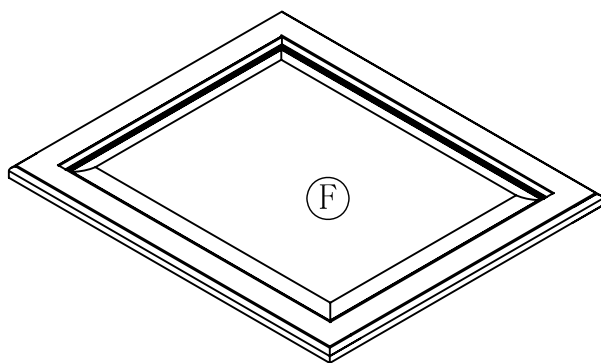

DOOR 1PC

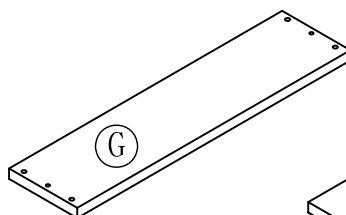

TOE KICK PANEL 1PC

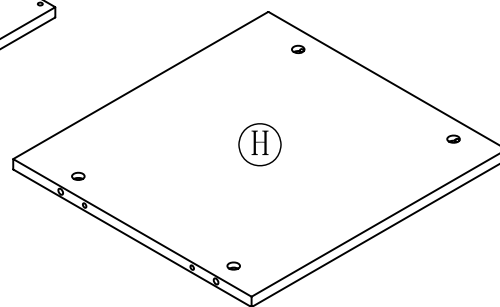


BOTTOM PANEL 1PC


HARDWARE LIST:




a. WOOD DOWEL 12PCS




b. CAM LOCK SCREW 16PCS

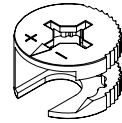


c. CAM LOCK 16PCS




d. KNOB BOLT 1PC

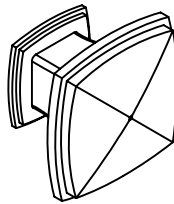

e. KNOB 1PC



f. 5/8" L FLAT HEAD
SCREW 12PCS

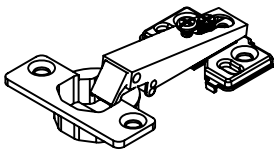

g. HINGE 2PCS





h. WRENCH 1PC






i. GLUE 1PC



STEP 1

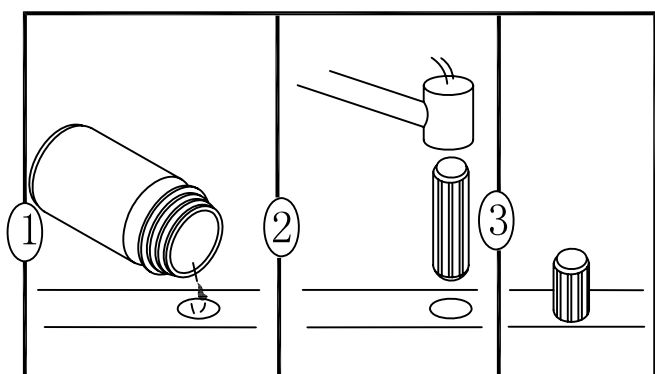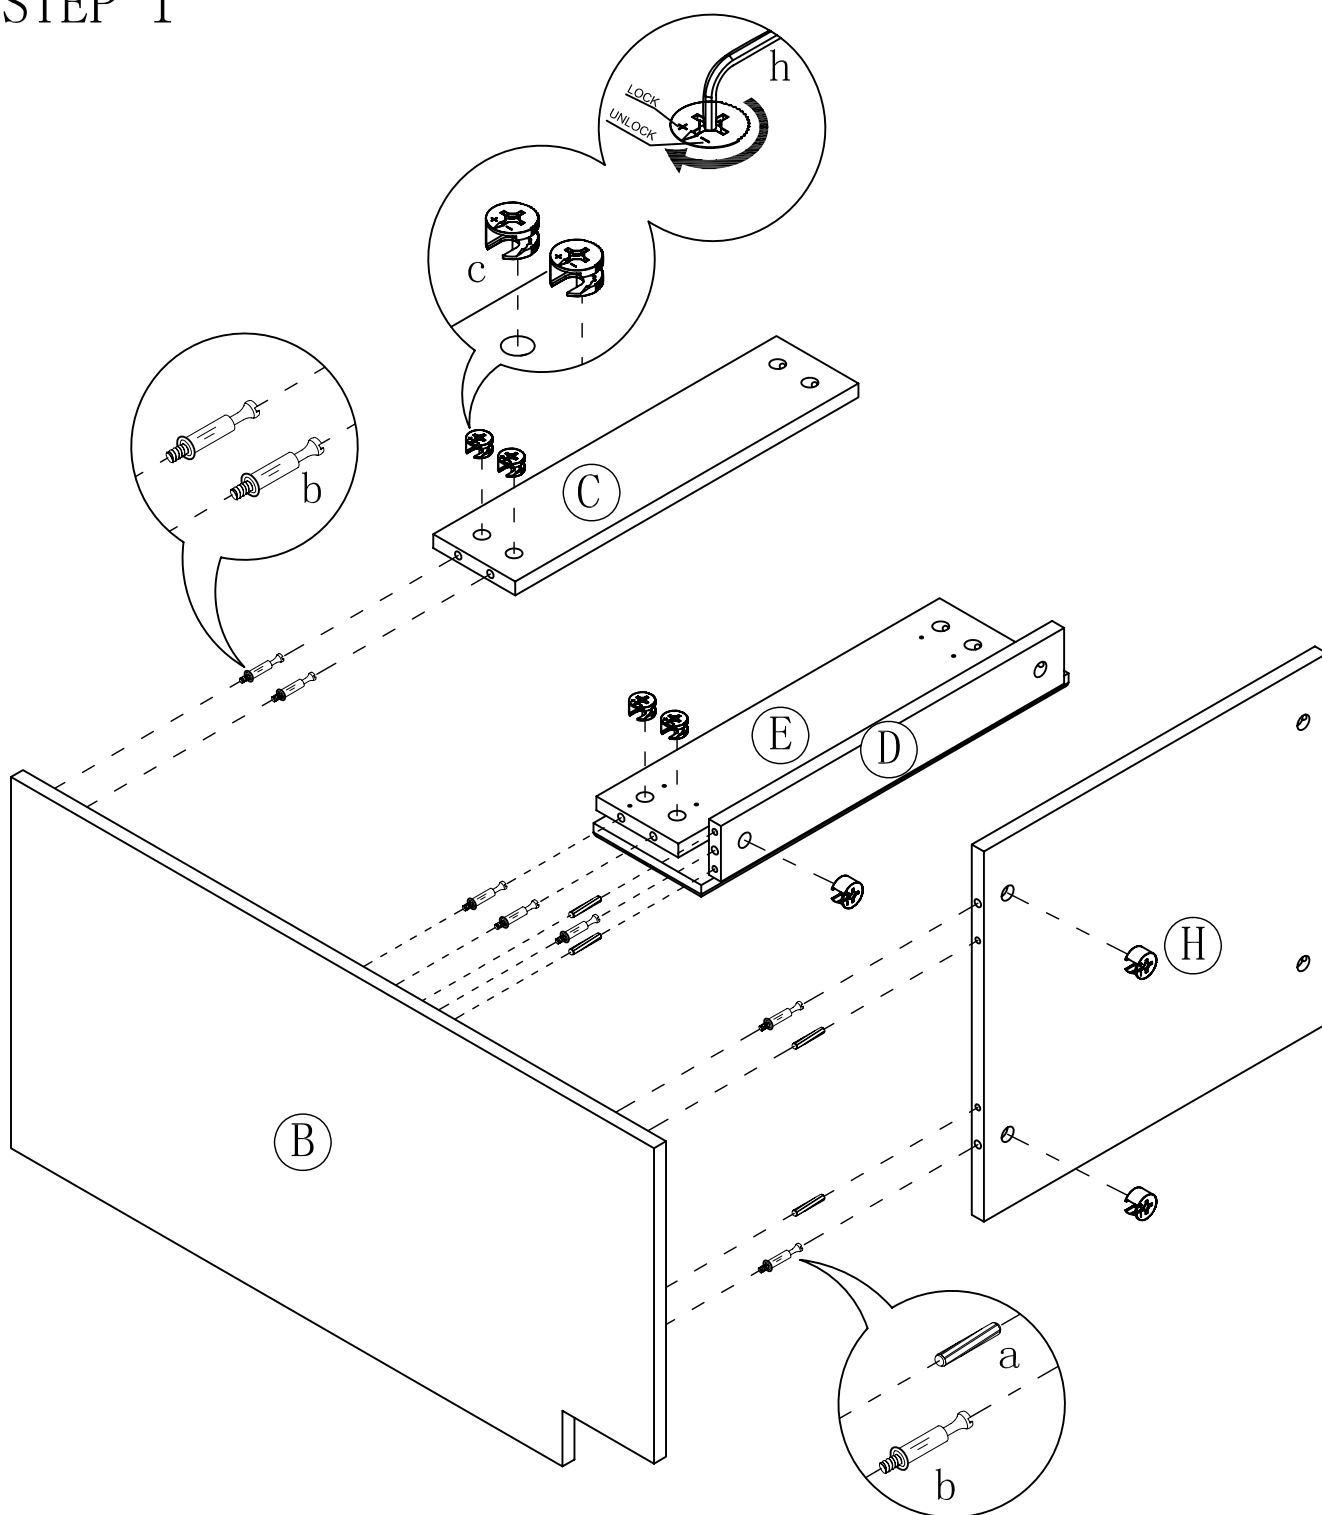


STEP 2

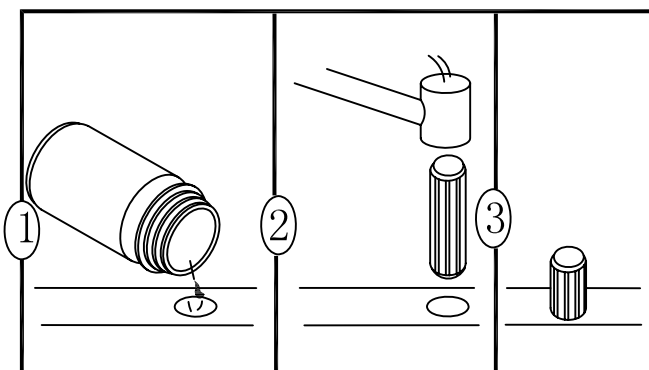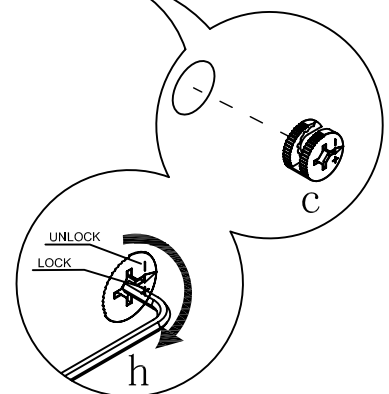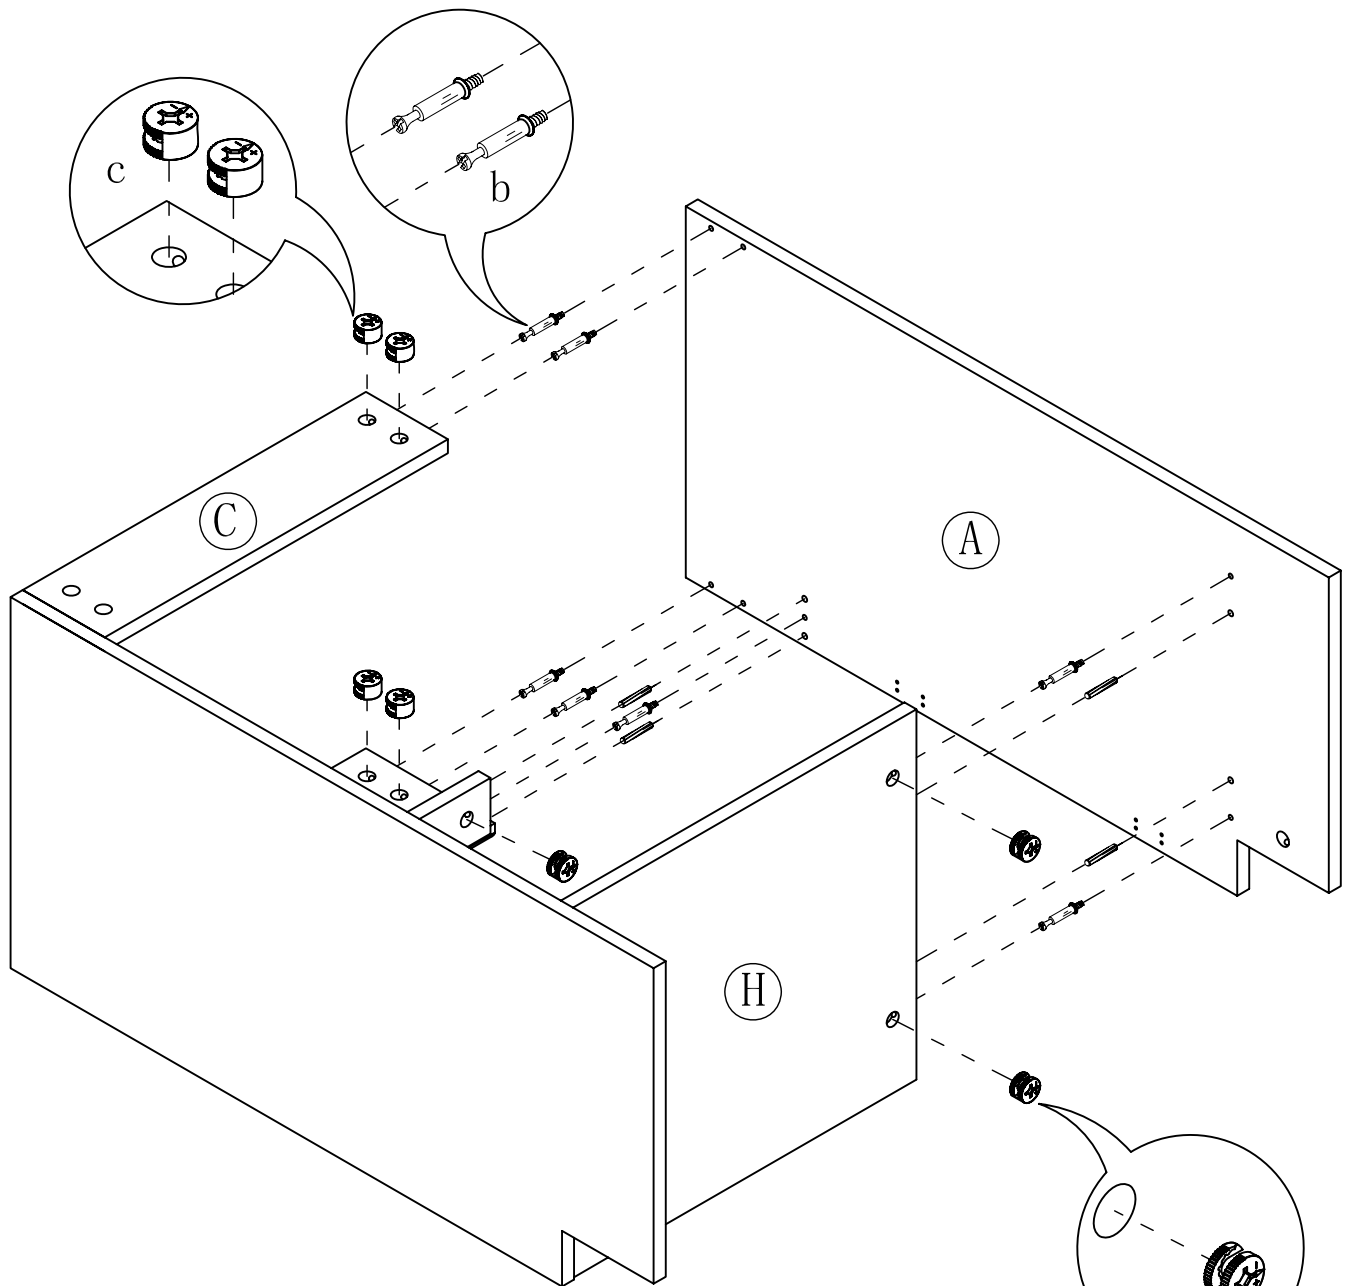


STEP 3

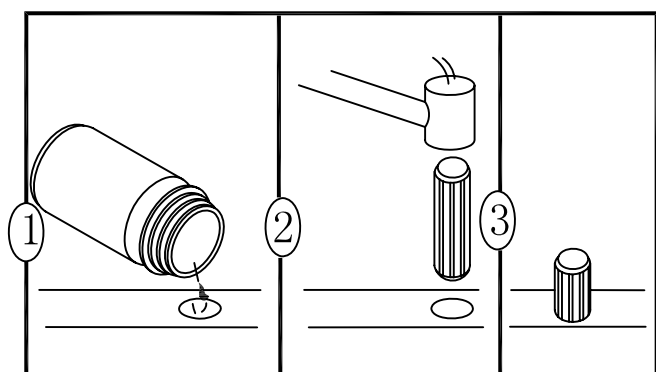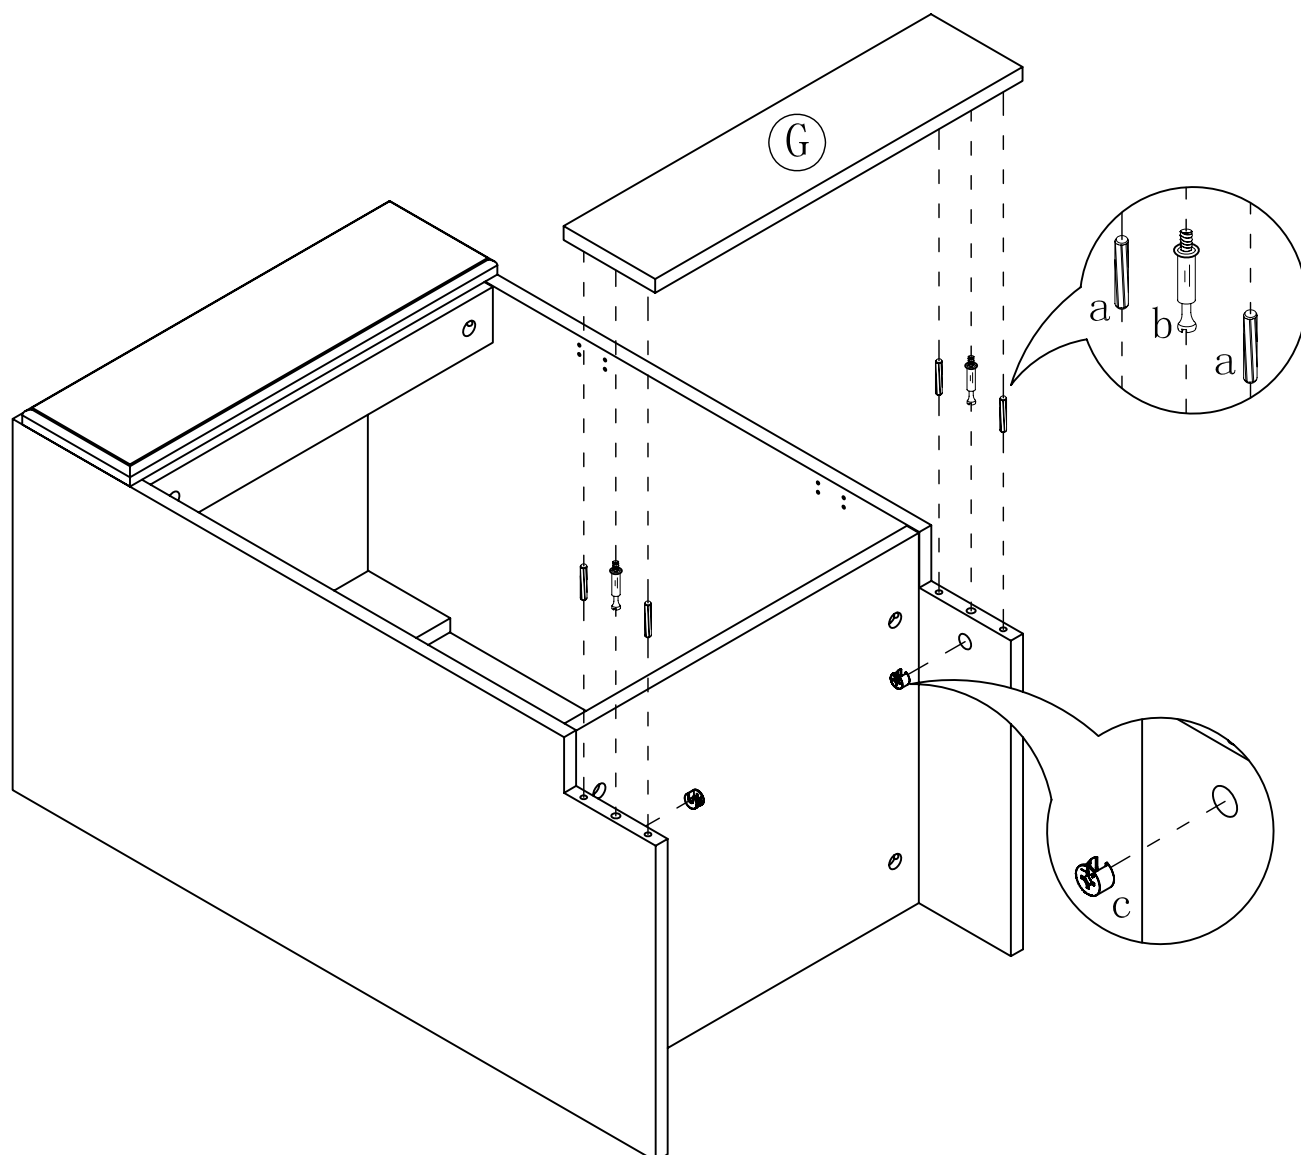

STEP 4

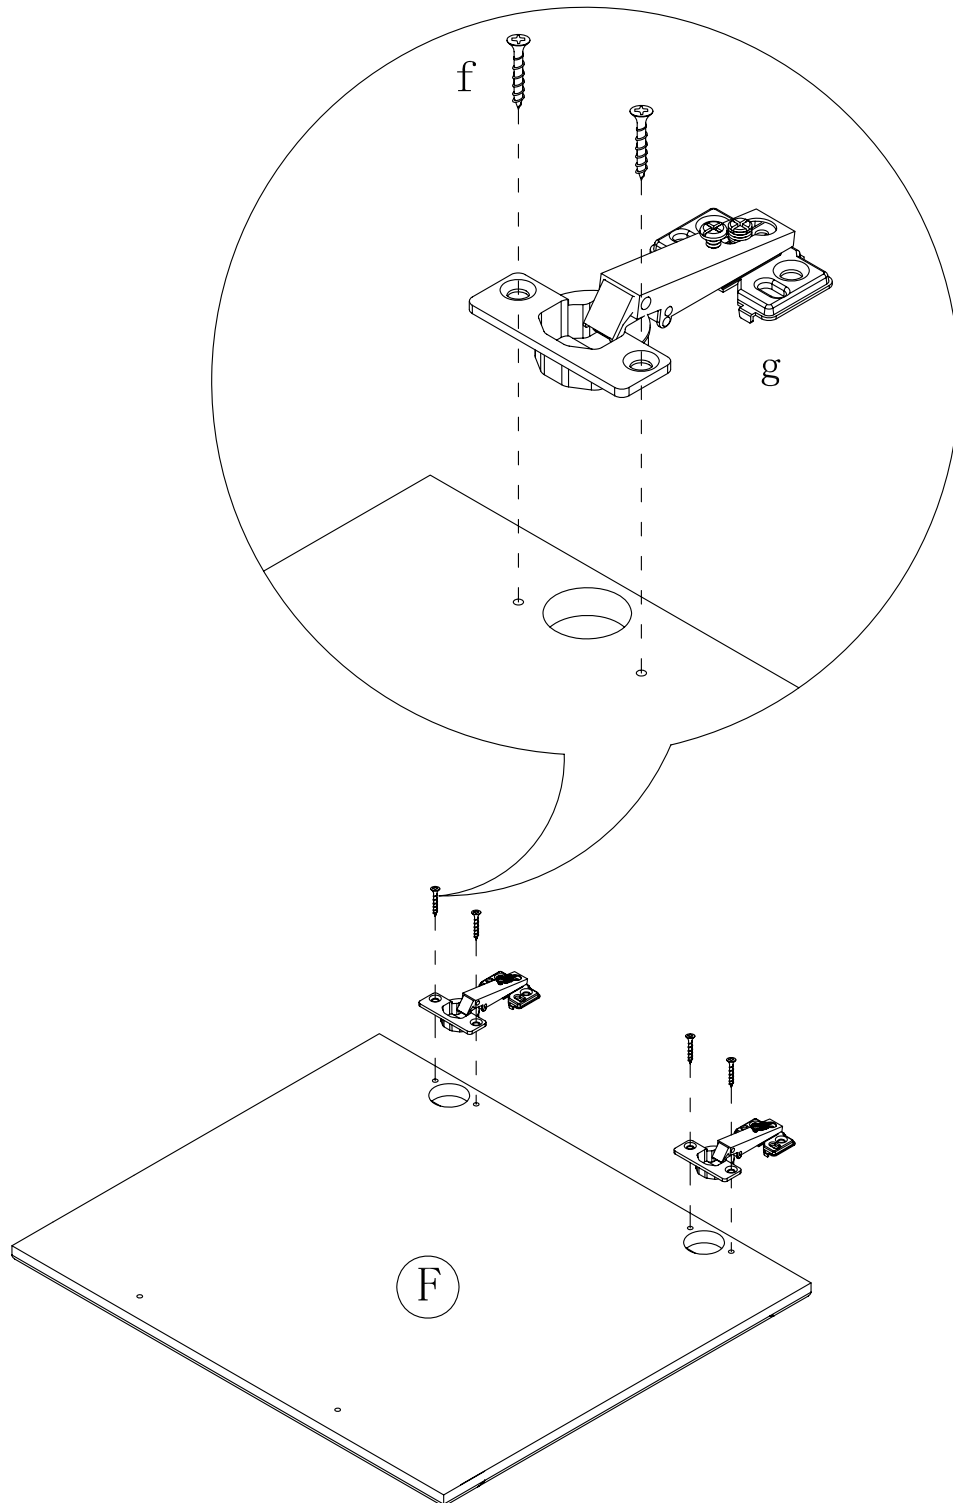


STEP 5

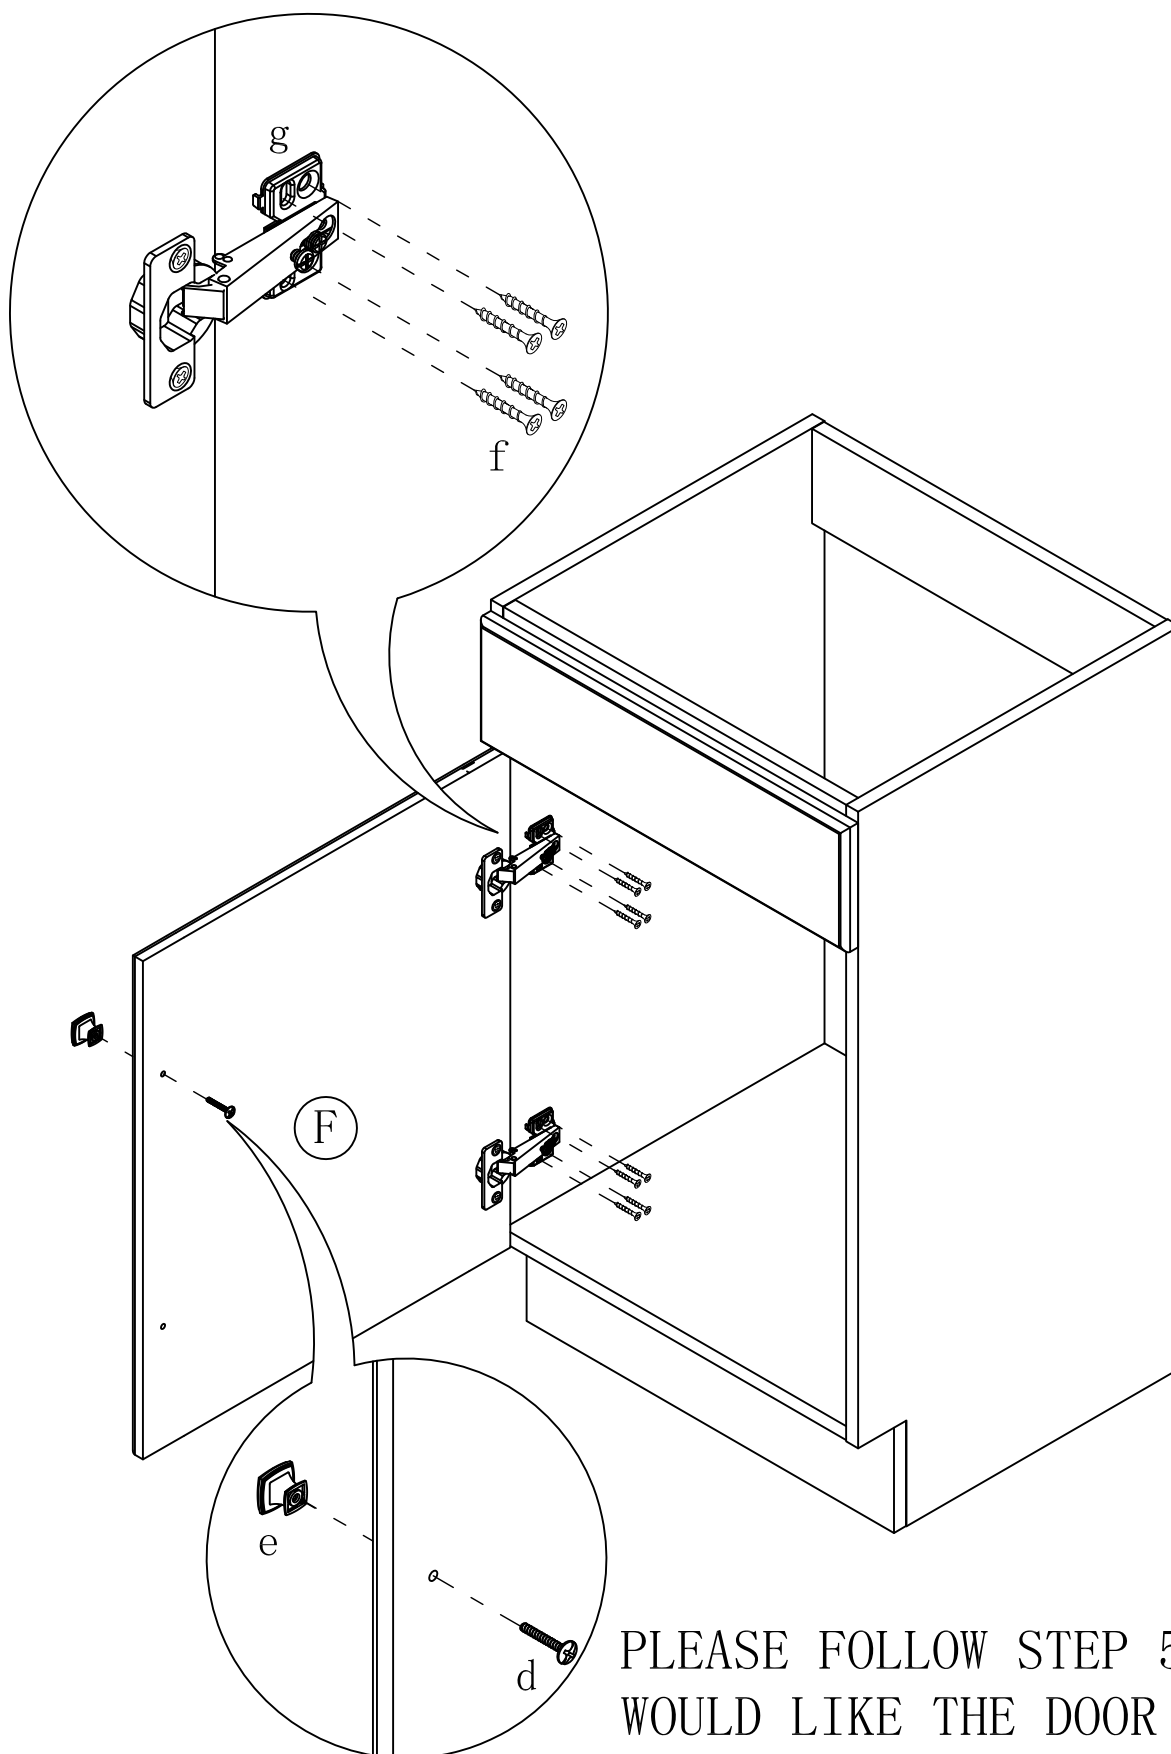

PLEASE FOLLOW STEP 5 IF YOU
WOULD LIKE THE DOOR OPEN
FROM THE LEFT

STEP 6

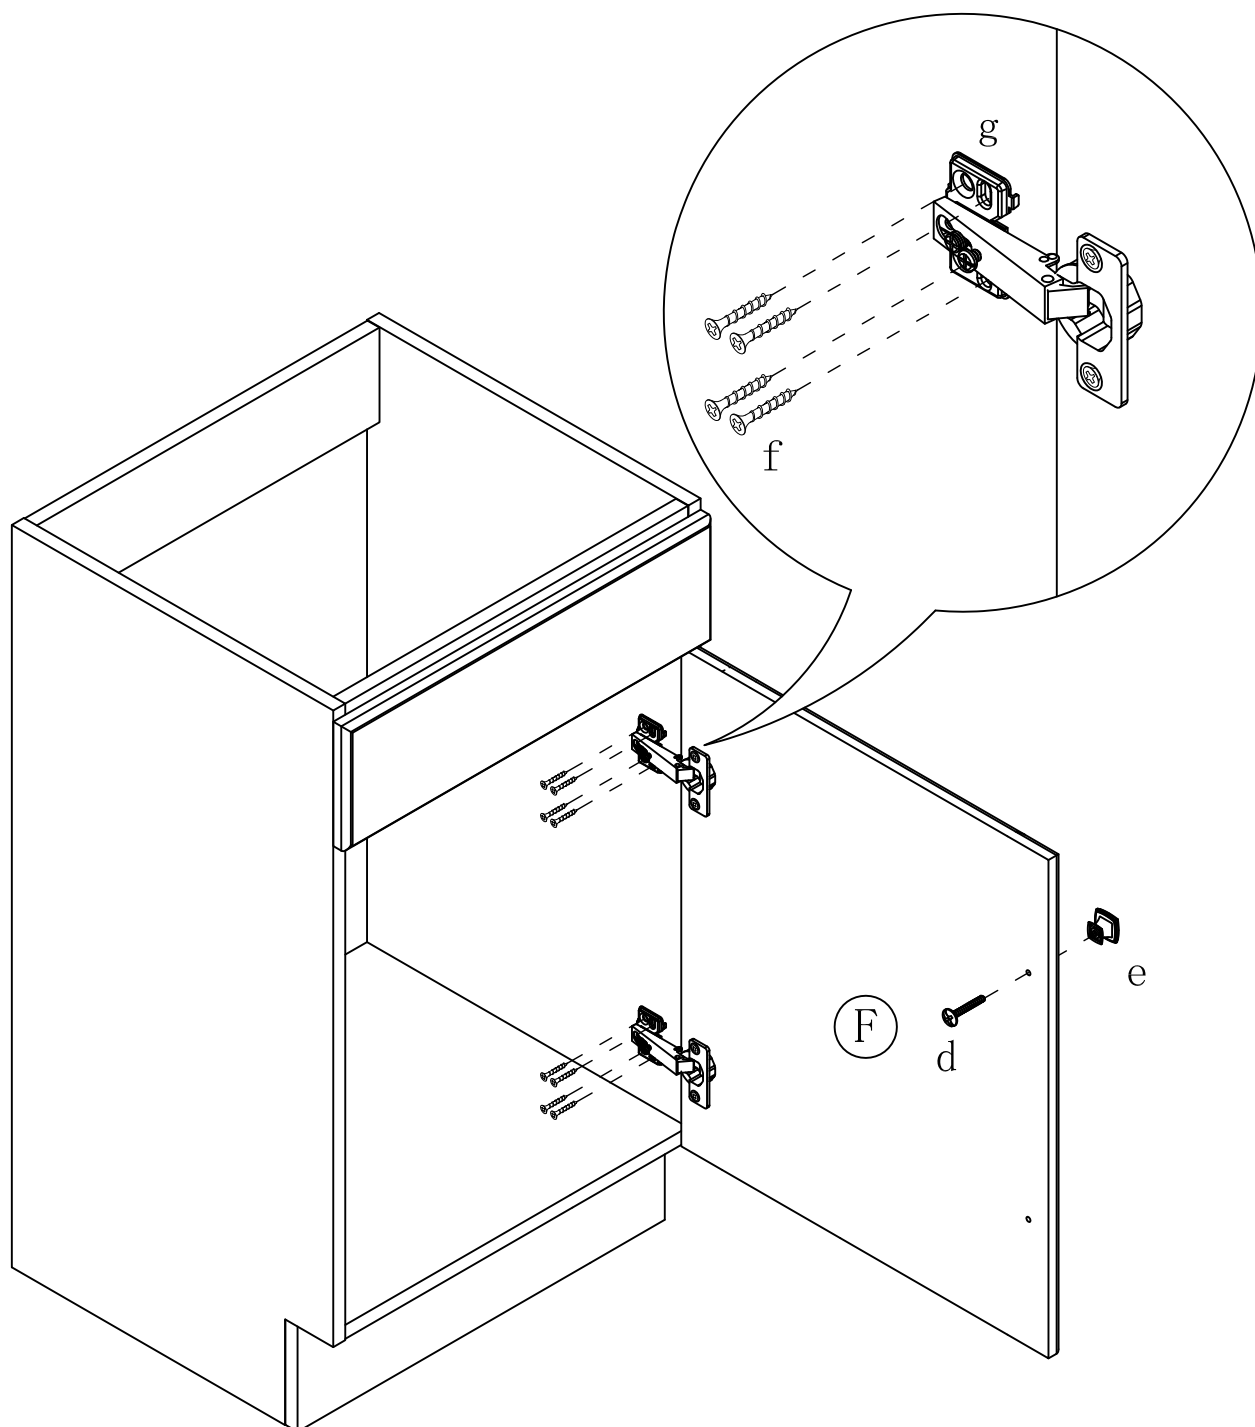

PLEASE FOLLOW STEP 6 IF YOU
WOULD LIKE THE DOOR OPEN
FROM THE RIGHT