




GRIP-RIM® PLUS* BOWLS

INSTALLATION INSTRUCTIONS

Step 1.

Locate correct position in countertop for cutout, left-to-right as well as front-to-back. Make cutout accurately, 3/4" less in width and in length than overall size of bowl (See other side of sheet). Corners of cutout may be square or any radius up to 1/2". For corner sinks, use bowl as template and make cutout 3/8" smaller than bowl size off each edge.

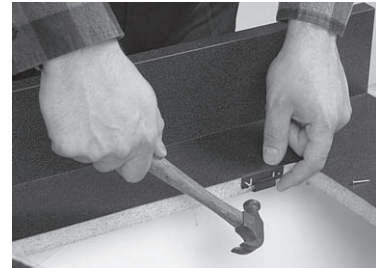


Step 2.

Nail spring clips to edge of cutout, seating the flange of the clip of top edge of cutout to serve as guide and to keep the clip straight. Locate a clip 1" from each corner on each side. Space remaining clips evenly and drive nail all the way in edge.



Step 3.

Install the countertop, without the bowl, onto the cabinets. Place a small amount of caulk or putty around the underside of bowl rim at edge of self-rim bead. Position bowl in cutout so that the downward prong rests on the spring clips. Push down firmly on two sides of bowl and it will snap snugly into place.

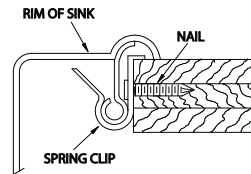

INSTALLATION NOTE -

The faucet and drain fittings may be installed on your new Just bowl prior to snapping into place. Final drain and supply connections can then be made to complete the installation.

BE SURE TO USE ALL CLIPS SUPPLIED!

**Grip-Rim® Plus sinks include the opportunity to use the same bowl for any counter thickness up to 1 1/2" thick by using the Just "J" Clip option.*


WHOOPS - FORGOT SOMETHING?

Perhaps you forgot to apply the caulk and want to take the bowl out. Don't try to pry it from the top - damage to the countertop or the bowl rim could occur.

Reach underneath and strike the bottom corner of the bowl sharply with the heel of your hand (don't use a hard object), first on one side then on the other. The bowl will popup out of the spring clips and then can be reinstalled as explained above.

"J" CLIP OPTION for SOLID SURFACE MATERIALS

For tile or unique installations, Grip-Rim® Plus* provides the "J" clip option, making Just sinks compatible with any type of material. Apply the "J" clip in the conventional way. Available for 3/4" standard through 2 1/2" thick tops. If top thickness is over standard 3/4" thick, please specify when ordering.

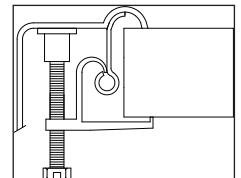

JUST MANUFACTURING COMPANY

9233 KING STREET . FRANKLIN PARK . ILLINOIS . 60131-2111

PH: 847-678-5150 . FAX: 847-678-6817 . E-MAIL: custserv@justmfg.com . www.justmfg.com



UNDERMOUNT BOWL INSTALLATION GUIDELINES

Undermount bowls may be installed in a number of different ways. They are most commonly installed under impervious material like granite or any of the man-made solid surface materials in the market place.


The installation methods vary by material and installer. Just Mfg. does not recommend any specific installation method as the finished appearance, type of material and warranty issues must be taken into account when determining the best methods for any installation.

Below, we offer a number of design considerations and installation methods that are commonly used by installers.

Visual Design Options

Architects and designers commonly have a completed project appearance in mind when planning any project. This may include how a sink appears after installation in a solid surface counter.

There are three basic design considerations for installation.

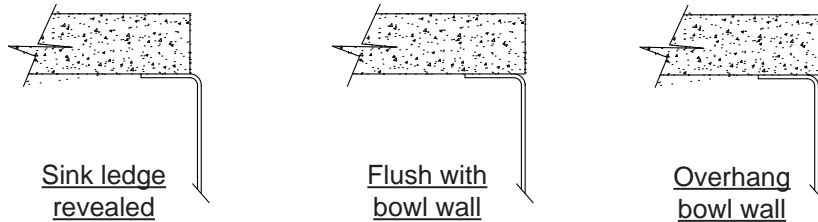


Consultation with the project designer and or end user should be undertaken to determine the desired visual appearance.


Installation Options

Installation should be made according to recommended methods by the countertop material manufacturer.

Just Mfg. Com. supplies formed clips to assist in the in the installation of the undermount sinks. When installing undermount sinks, a seal should be established between nthe sink ledge and the countertop material.

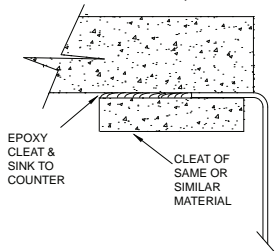


Using a cleat of same or similar material, the installer uses epoxy to secure the cleat and sink into place. When solid surface materials are used, the same material can be poured over the rear ledge of the bowl creating a one piece appearance on the back.

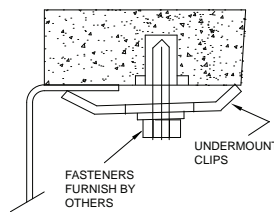

Using the undermount clip supplied bu just, installer epoxy threaded studs on the back of the counter and attach the clips and sink. Some may use a threaded knurled insert inserted into holes on the counter then attach the clip and sink.

NOTE!!!Drilling into some material may void the manufacturer's warranty. Just Mfg. Co. does not recommending drilling or other fabrication methods that would crack or void the manufacturer's warranty.

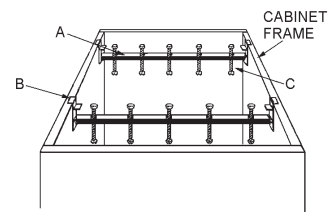

Rail installation kits are available to mount undermount sinks. The rails mount to the inside of the cabinet, running in front-to-back (24" kit) in parallel, also available for installing left-to-right using 36" kit.

Just Mfg. Co. assumes no responsibility for installation of undermount sinks. Installation methods must be used that will NOT void the warranty of counter material.

JUST MANUFACTURING COMPANY

9233 KING STREET . FRANKLIN PARK . ILLINOIS . 60131-2111

PH: 847-678-5150 . FAX: 847-678-6817 . E-MAIL: custserv@justmfg.com . www.justmfg.com